- 1. Press Phone Settings icon 🗘 > Line > Select the line
- > Forward Settings
- 2. Enter the destination number and the type of forward and press OK icon √.

Call Mute

- 1. Press > to Mute the microphone during the call.
- 2. Press & again to un-mute the conversation.

Call list

- 1. Press Call Logs icon 🗲 .
- 2. Scroll the list using navigation key � or slide the screen 3. To dial an entry, press Dial icon •• or click the phone icon at left then click dial icon or pickup handset or press or 🕪).

Phonebook

- Access phonebook:

 1. Press Contact icon
- 2. Select All Contacts or other group.
- 3. To dial an entry, press Dial icon 📞 .

Add new entry:

- 1. Press Contact icon . Press All Contacts or other group > Press Add icon.
- 2. Enter name and number and press OK icon $\sqrt{\ }$.

Programmable keys

DSS virtual keys:

- 1. You can use the phone web interface to configure the keys of the screen.
- 2. Press unfold > you can press any keys which is still blank or long press the key that have configured, select a type and value, press √ icon.

Other keys:

You can also configure shortcuts for the navigation keys and softkeys on web ui.

2. You can press Phone setting icon 🗘 > Key, select the SoftkeyScreen you need, then select among the configurable items, and select your desired type and value, press Save.

Redial

1. Press 🔾 , redial a call number.

Do not disturb

- 1. Press DND icon a when standby or click Phone Settings icon 🌣 > DND.
- 2. Select the Mode.

Voice message

- 1. To access your voice mailbox, press Voice message key or Voice message icon \mathbf{QQ} , number of message be indicated if provided by your server or PBX.
- 2. Select the line and press phone icon to call.


Bluetooth

- 1. Press Bluetooth icon in the status bar to open Bluetooth.
- 2. Press Settings icon 4 > Connected devices > Pair new device . After opening, it displays the scanned Bluetooth list, select any device, and click on the device pairing.

Wi-Fi

- 1. Enter the Settings icon <a> Network & internet > Wi-Fi, enable Wi-Fi, and you can browse the list of available Wi-Fi;
- 2. Select the available network, click on the network to enter the password to connect and click connect button.



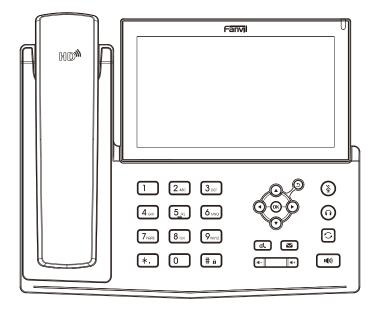

X7A **Quick Installation Guide**


Fanvil Technology Co., LTD. www.fanvil.com

www.fanvil.com

Email:sales@fanvil.com Tel:0755-2640-2199

Add: 4F, Block A, Building 1#, GaoXinQi Hi-Tech Park (Phase-II),67th District, Bao'An, Shenzhen, China

Packaging list

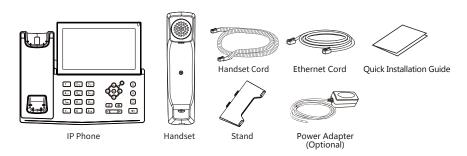

Screen icon



In handset mode

Mute activated













New VM Messages

Do not disturb activated

Missed call(Status bar)











Keys features

Ringer off



Message waiting indicator



Up/down/left/right navigation keys, Return key OK key, Shortcut to Menu Return key, Go back to the previous directory

(d) Hold key, Hold/Resume the call

In idle mode: ringer off In communication mode: mute/un-mute a call

In idle mode or during ringing: increase or decrease ringer volume In communication: increase or decrease earpiece, headset or hands-free volume



Voice message key



Headset kev. Activate/deactivate Headset



Redial key, Access to redial the last record

 


Long press to lock keypad. Enter PIN to unlock keypad (default 123)



Hands-free key, Activate/deactivate hands free


Installation the device



Connecting to the Device

Please connect power adapter, network, PC, handset, and headset to the corresponding ports as described in below picture.

- ① USB port: connect USB device (U disk)
- 2 Power port; connect the power adapter.
- 3 Network port: connecting local area network or internet.
- 4 PC port: the network port connect to the computer.
- (5) Headset port: connect headset.
- 6 Handset port: connect IP Phone handset.

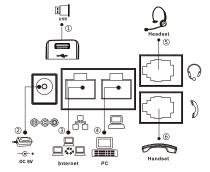

Configuration

Configuration via Phone

- 1. Press Phone Settings icon 💢 .
- 2. Select Ethernet Settings: To configure the Network Settings (DHCP/Static)
- 3. Select Line: To configure enable the account, fill the SIP server address, port, user name, password etc.

Configuration via Web

- 1. Get the IP address from the phone: Press Phone Settings icon 🌣 > Common.
- 2. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment (The default username and password are both 'admin'.)
- 3. Configure: Select network/Account, etc. And fill the relevant content.

Language setting

- 1. Press Settings icon ◀ > System > Language & Input
- 2. Select the desired language.

Making a call

- 1. Pre-dialing: enter the phone number and pick up the
- 2. Direct dialing: lift the handset and enter the phone
- 3. Handsfree: enter phone number and press (1) or vice
- 4. **Headset:** enter phone number and press Ω or vice versa.
- 5. Dial icon: Click dial icon and then enter the phone
- 6. Designated line: press line key, enter phone number and press dial kev.

Accepting a call

- 1. With the handset: pick up the handset.
- 2. With a headset: press \(\Omega\).
- 3. With the handsfree: press iti).

Putting a call on hold

- 1. Press of key or Hold icon, caller is put on hold.
- 2. To retrieve the call press (key or Resume icon. Note: with more than one active call, select desired call by sliding screen and use the corresponding icon to hold or resume

3-party conference

- 1. Once in line with 1st caller, press 🖒 Conference icon, 1st caller is put on hold.
- 2. Then call the 2nd number.
- 3. After, 2nd call is established, press Conference icon to set up the conference.

Call transfer

Attended transfer:

- 1. Press & Xfer icon during the active conversation, the call is put on hold.
- 2. Dial the second telephone number.
- 3. When the call is answered, then press c. Xfer icon to complete the operation.

Blind transfer:

- 3 -

- 1. Press CX Xfer icon during the active conversation, the call will be on hold.
- 2. Then enter the 2nd telephone number and press & Xfer